Continuous Ink Supply System
for
Epson Stylus C58

Installation Instruction

For ST Prefilled Version

This Version of the Continuous Ink Flow System comes with Prefilled Cartridges and Auto Reset Chips. You just need to fill the Reservoir bottles and print! The whole operation is very easy. It's really an effective tool to save your money.

1、General Guide:

1) Components

A、CIS system 1 set　　B、 Air filters 4pcs　　C、Support Arm 1 set
D、Refill Kit 4 pcs　　E、Instruction CD 1pc

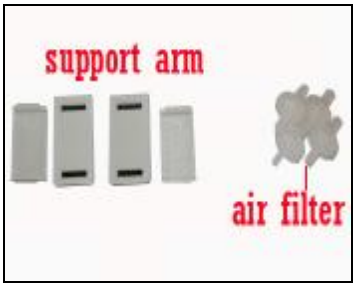

2) Opening box inspection

a、Check whether all the accessories are ready.
b、Check whether there's the leakage of the CISS, whether some tubes have been separated from the CISS, whether there are air bubbles in the tube (If there exists more than 20CM air space, please kindly to contact with the local dealer)

2、Printer testing:

1) Check whether the printer is in normal condition, like mechanical status, lubrication status etc.
2) Print testing lines to ensure the printing head is good condition.
3) Print pictures to see whether the printing image is ok.

3、Installation Procedures:

1) First step

Put the CISS on the left side of the printer. In the meantime place all the tubes at correct position

Pull out the small rubber plug from the air hole as above picture shown.

Place air filters into air holes, the thicker side, is down into tank.

2) Set up the Continuous Ink Supply System

Press the “ink cartridge replace Button”

Move the cartridge car to cartridge remove position

Uplug the power connector

Open the cartridge cover to certain angle

use a small screwdriver to loosen the cartridge cover,

Circumgyrate the screwdriver clockwise then remove the cartridge cover.

Remove the original cartridges

Insert our no-sponge cartridge into printer carefully

3) Fix supporting arm

Tear off the sticker, and place one on the inner side of printer, and place another small tube clip on the right side of printer, as above picture shown.

4)Install the tubing.

Put the tube into the Support Arm and Small Tube clamp as the below picture shown.

Move the cartridges to the left side.

Place the tube through the two small tube clips, as above picture shown.

5) Adjust Tubing

Slide the cartridge car from left to right several times; make sure the tubes not too tight when cartridge is in the far left position, and not too loose which to avoid tubing block. Pls refer to the below pictures.

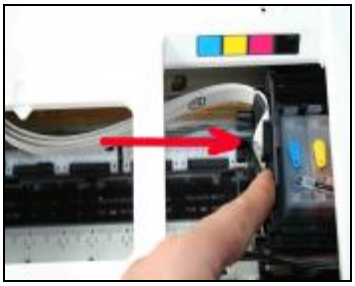

Too long

Distorted

Well-installed

Plug the power connector

Turn on the power
Watch for anything unusual.

6) Checking the printing head

EPSON
Main
Page Layout
Maintenance
Status Monitor 3 (M)
Use this utility to automatically check for errors and also check the level of ink remaining.
Nozzle Check (N)
Use this utility if gaps or faint areas appear in your printout.
Head Cleaning (H)
Use this utility if your print quality declines or the Nozzle Check indicates clogged nozzles.
Print Head Alignment (P)
Use this utility if misaligned vertical lines appear in your printout.
Printer and Option Information (O)
Use this utility to create or verify settings for your printer and optional devices.
Speed & Progress
Version 5.50 进入打印机喷嘴检查选项

Enter in the Printer Services panel and print a Demo Page.



Nozzle check is normal, start printing



Pls clean printing head

If there shows any breaks (maybe it caused by air bubbles in the printing head), please clean your printing head. If it is still shown little breaks, especially only for one color, it is unnecessary to repeatedly clean printer-head. Just keep the printer unuse for about one hour and print a Demo Page again. If it is still abnormal, please kindly contact local dealer.

4、Auto Reset Procedure

Ink indicator light sparkling, but it still can work.

Till the Demo Page appear “X”, which indicates to replace the cartridges

There are two Cartridge reset method:

1. Click “How to”, and follow up the info, till “OK” finished.
2. Push the button with red light directly on the left side of printer for one time, when cartridges move, press that button again. Then you will see the cartridge with full ink again.

5. Add ink into the reservoir bottles.

Please pay attention to the ink level in the reservoirs; if the ink level is below 1CM as the

above picture shown, please use refill kits to fill ink into Reservoir bottles. Carefully pull out the rubber plugs from the refill holes.(there is possibility of ink spattering. Be careful!) Refill ink according to the color in short supply. Then put the rubber back. (Please keep the printer and the reservoir at the same horizontal line during the process of refilling ink.)

6. Close the cartridge cover as the below pictures shown.

7、Attention for maintenance:

Take out the CISS including the inner cartridges and other components. Then remove support arm from printer, and place the original cartridges in. Please inquire local dealer before sending to maintenance.

Notice:

1. Please don't take out cartridge at random after installing the CIS system. Keep the reservoir bottles on the same level with the printer.
2. Try to keep at least 1/2 inch of ink in the bottles, as you don't want to run out of ink and draw air into the cartridge.
3. Don't place the Reservoir Bottles higher or lower much than the printer.
4. To be used in a dry place between 15 and 35 degree. Avoid exposure to direct sunlight.
5. Don't put the continuous ink supply systems reversed or leaning during the shipment. Please make sure all the ink filling holes and Ventilation holes are closed tightly during the transportation. Otherwise, the ink shall leak out.
6. Don't sway the cartridge frequently. It may cause ink leakage.
7. Don't pull out the connector of cartridge and don't tear off adhesive tape at the bottom of cartridge.

Warning:

1. Not drinkable; keep it out reach of children.
2. Avoid exposure to direct sunshine and don't keep it in high or freezing temperature.
3. Avoid collision and fallen down.